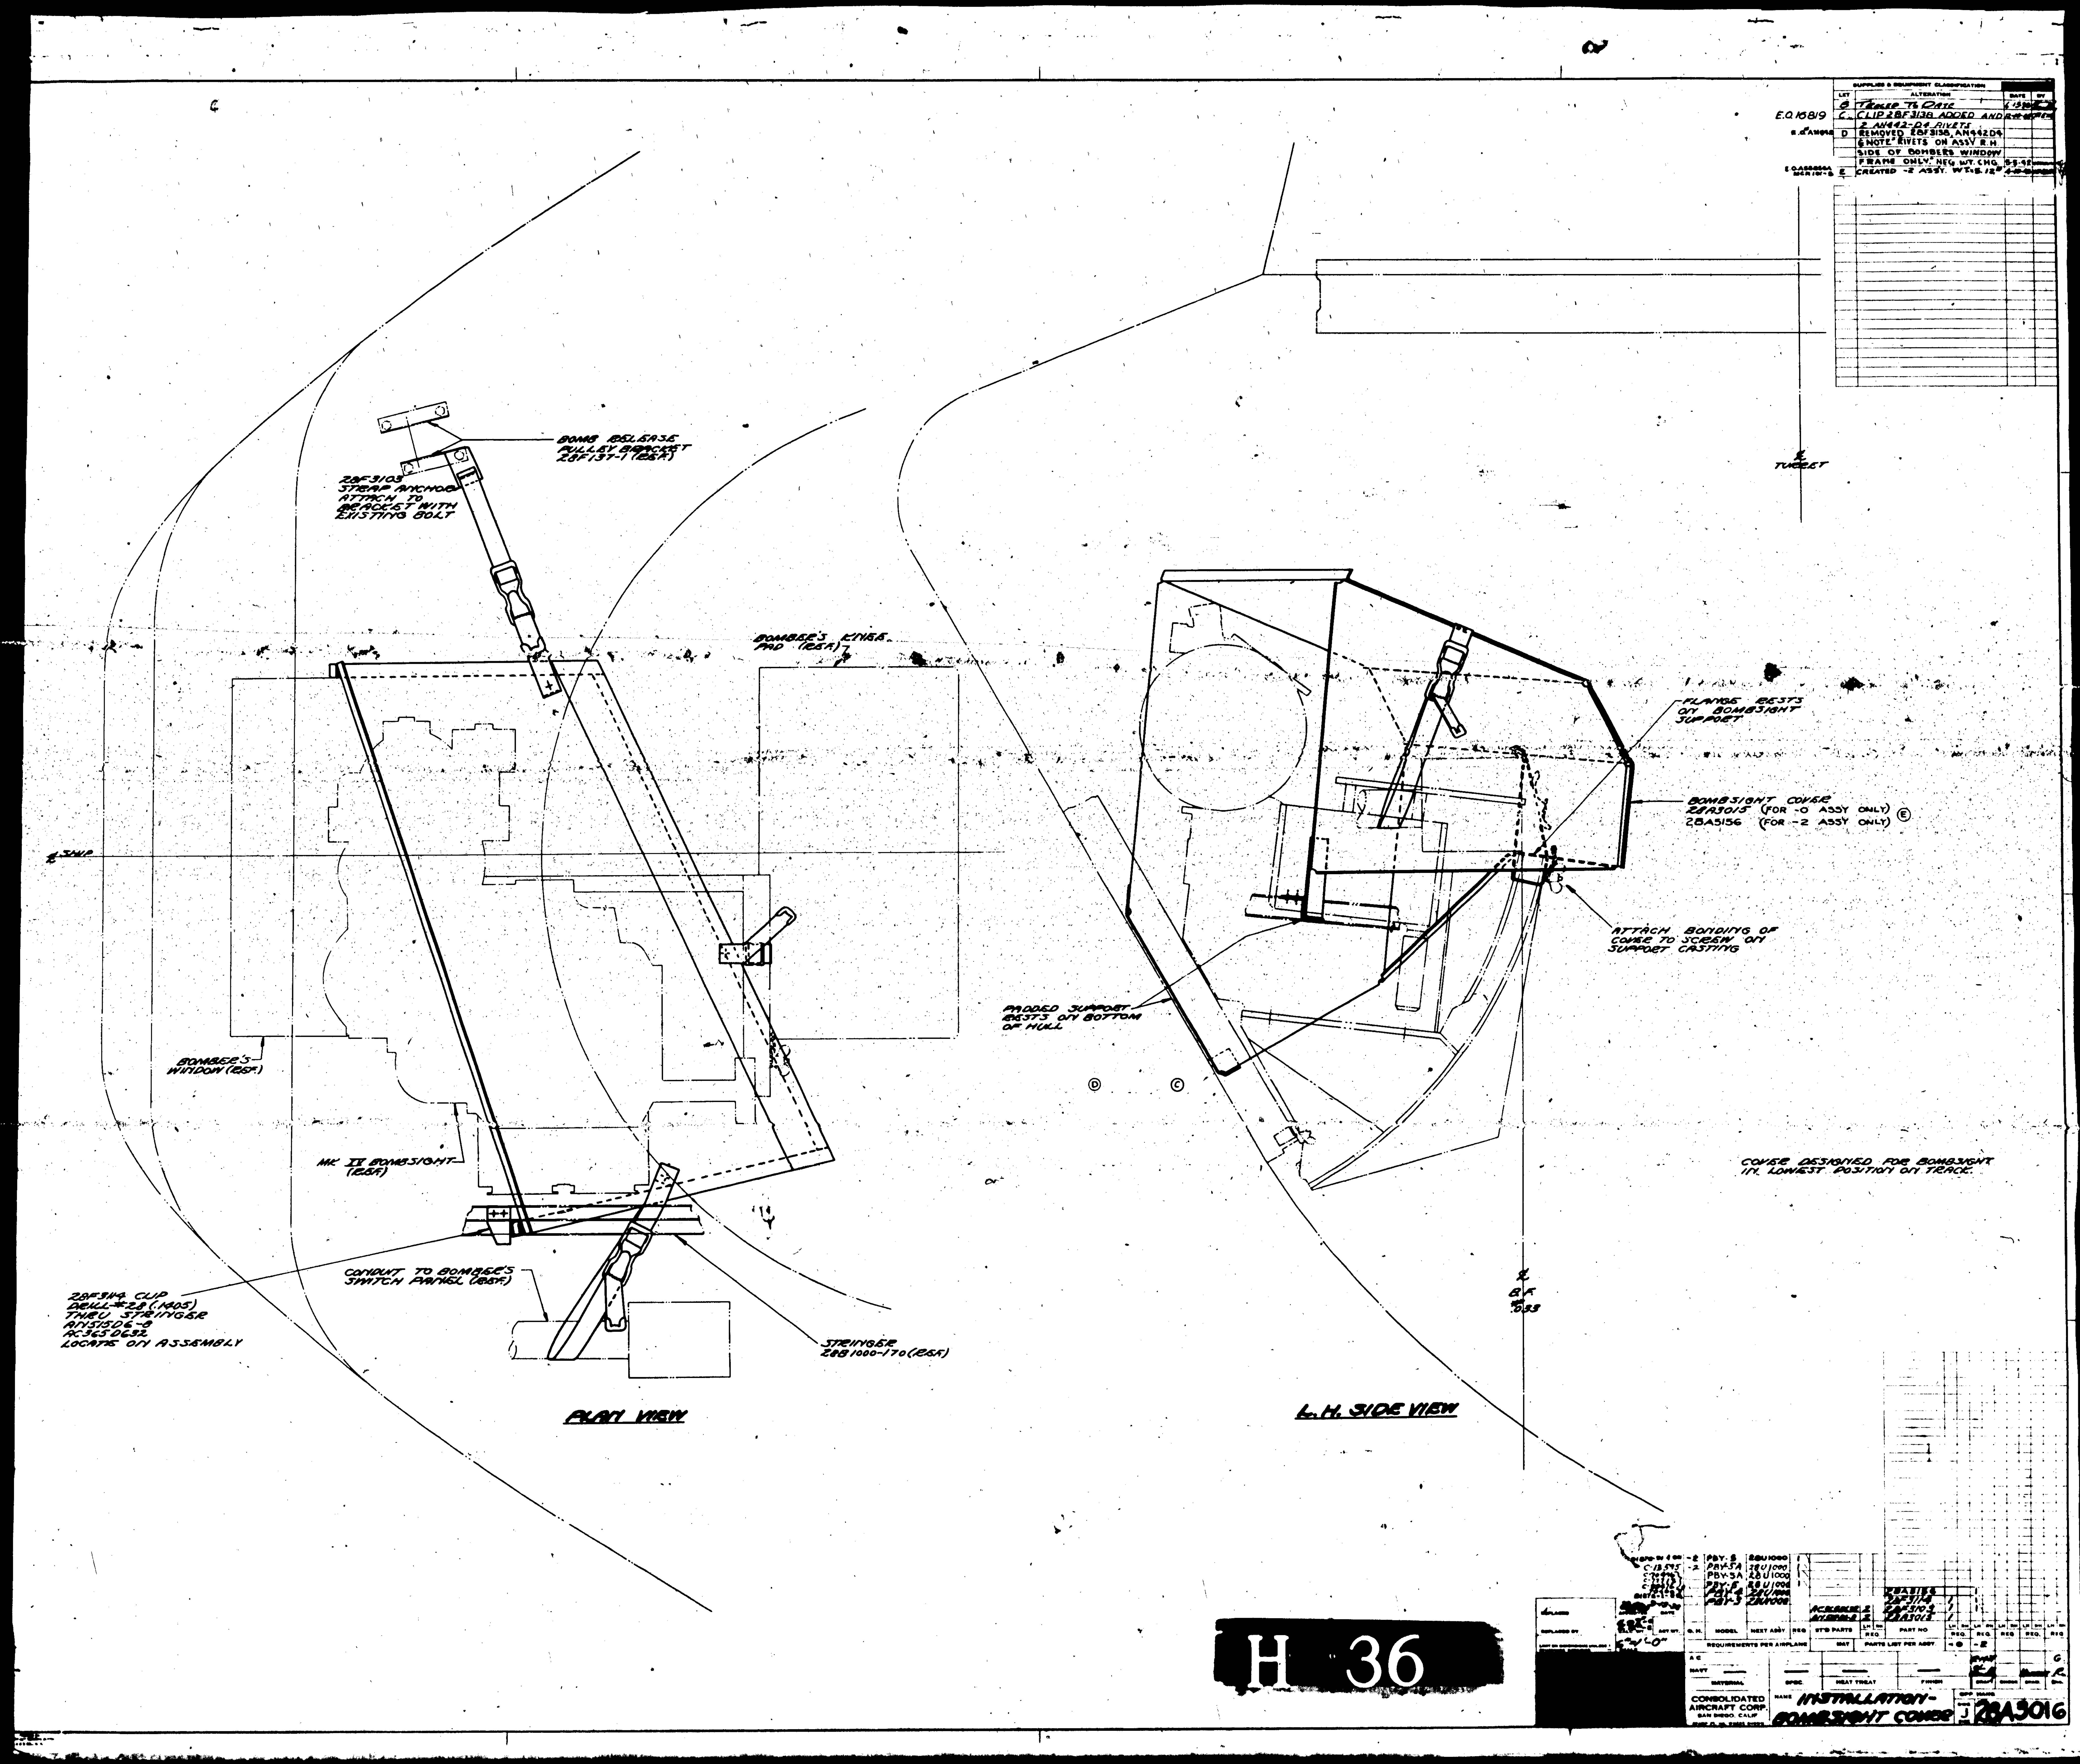


SUPPLIES & EQUIPMENT CLASSIFICATION
LET | ALTERATION | DATE | BY
B TRACED TO DATE
E.O.16819 C CLIP 28F3138 ADDED AND 2 AN442-D4 RIVETS
D REMOVED 28F3138, AN442D4 & NOTE "RIVETS ON ASSY R.H. SIDE OF BOMBERS WINDOW FRAME ONLY." NEG WT. CHG. 5-5-42
E CREATED -2 ASSY. WT=5.12#
℄ TURRET
BOMB RELEASE PULLEY BRACKET 28F137-1 (REF.)
28F3103 STRAP ANCHOR ATTACH TO BRACKET WITH EXISTING BOLT
BOMBER'S KNEE PAD (REF.)
℄ SHIP
BOMBER'S WINDOW (REF.)
MK. XV BOMBSIGHT (REF.)
28F3114 CLIP DRILL #28 (.1405) THRU STRINGER AN515D6-8 AC365D632 LOCATE ON ASSEMBLY
CONDUIT TO BOMBER'S SWITCH PANEL (REF.)
STRINGER 28B1000-170 (REF.)
PLAN VIEW
FLANGE RESTS ON BOMBSIGHT SUPPORT
BOMBSIGHT COVER 28A3015 (FOR -0 ASSY ONLY) 28A5156 (FOR -2 ASSY ONLY) Ⓔ
ATTACH BONDING OF COVER TO SCREW ON SUPPORT CASTING
PADDED SUPPORT RESTS ON BOTTOM OF HULL
Ⓓ Ⓒ
COVER DESIGNED FOR BOMBSIGHT IN LOWEST POSITION ON TRACK.
℄ B.F. 0.33
L.H. SIDE VIEW
C-13595
-2 PBY-5 28U1000
-2 PBY-5A 28U1000
PBY-5A 28U1000
PBY-5 28U1000
PBY-6 28U1000
PBY-3 28U1000
AC365D632 2
AN515D6-8 2
28A5156
28F3114 1
28F3103 1
28A3015 1
DATE
G.H. | MODEL | NEXT ASSY | REQ | STD PARTS | REQ | PART NO | REQ -0 | REQ -2
REQUIREMENTS PER AIRPLANE | MAT | PARTS LIST PER ASSY
A.C.
NAVY
MATERIAL | SPEC. | HEAT TREAT | FINISH
CONSOLIDATED AIRCRAFT CORP. SAN DIEGO, CALIF.
NAME INSTALLATION - BOMBSIGHT COVER
J 28A3016
H 36